

PLEASURE-WAY INDUSTRIES LTD.

Pleasure-Way
Excel



OWNER'S MANUAL



WARNING

IT IS NOT SAFE TO USE COOKING APPLIANCES FOR COMFORT HEATING.

Cooking appliances need fresh air for safe operation.

Before Operation:

Open overhead vent or turn on exhaust fan

Open Window

FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

Unlike homes, the amount of oxygen supply is limited due to the size of the recreational vehicle, and proper ventilation when using the cooking appliance(s) avoids dangers of asphyxiation. It is especially important that cooking appliances not be used for comfort heating, as the danger of asphyxiation is greater when the appliance is used for long periods of time.



WARNING

DO NOT FILL CONTAINER (S) TO MORE THAN 80 PERCENT OF CAPACITY.

FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

Overfilling the propane container can result in uncontrolled propane flow, which can cause fire or explosion. A properly filled container contains approximately 80 percent of its volume as liquid propane.



DANGER

IF YOU SMELL PROPANE:

Extinguish any open flames, pilot lights, and all smoking materials

Do not touch electrical switches

Shut off the propane supply at the container valve(s) or propane supply connection

Open doors and other ventilating openings

Leave the area until the odor clears

Have the propane system checked and leakage source corrected before using again

FAILURE TO COMPLY COULD RESULT IN EXPLOSION RESULTING IN DEATH OR SERIOUS INJURY.



WARNING

Propane cylinders shall not be placed or stored inside the vehicle. Propane cylinders are equipped with safety devices that relieve excessive pressure by discharging propane to the atmosphere.

FAILURE TO COMPLY COULD RESULT IN DEATH OR SERIOUS INJURY.

PLEASURE-WAY INDUSTRIES LTD.

Pleasure-Way Industries Ltd. takes great pride in the quality and excellence that the Pleasure-Way name represents. We appreciate having you as a customer and welcome you into the Pleasure-Way family. This manual is provided to introduce you to the many features of your new Dodge Ascent including operation, maintenance and warranties. **We strongly advise you to take time to read this manual, the Ford chassis owners manual as well as those of the motorhome components before you use your new motorhome.** It will help you to better understand the many operational features of this recreational vehicle.

After reading this manual, be sure to keep it in the motorhome as a reference. Your Pleasure-Way dealer will be glad to answer any further questions about the operation of your motorhome and the appliances.

All reasonable precautions have been taken in the preparation of this manual. We have been as accurate as possible at the time of this publication. However, due to our policy of continuous improvement and refinement to our product, Pleasure-Way reserves the right to make product changes at any time without prior notice and without incurring obligations. As a result, Pleasure-Way assumes no responsibility for errors or omissions in the accuracy in the content of this manual.

We know that you will enjoy your new Pleasure-Way and we wish you many miles of pleasant and carefree driving. Happy Travels!

TABLE OF CONTENTS

Warranties and Polices	5 - 6
Safety	7-9
Motor Home Exterior	10- 15
Motor Home Size	10
Exterior Side Photos	11
Air Ride Fill Valves	12
LP fill Valve	12
Furnace Vent	12
Driver Exterior Shower	13
Driver Water Heater Vent	13
Driver Side Sewer Hose	13
Driver Side Sewer Dump Valves	14
Driver Side Fridge Vent	14
Passenger Side Fresh water fill	14
Passenger Side Exterior 110 volt plug	15
Passenger Side Porch light	15
Coach & Chassis Battery	15
Travel Preparation	16
Motor Home Systems	17-30
LP Gas System	17
LP On / Off valve, Fill Valve, Bleeder Valve	18
LP Tank Gauge	19
How To Use LP Appliances	19
Cook Top	19
Furnace	20
Refrigerator	20
Water Heater	21
Fresh Water System	21
Fresh Water Fill/Drain	21
City Water Connection	22
Water Pump	23
Toilet	24
Shower	24
Waste System	24
Draining Waste tanks	25
Winterizing	26-28
Living Area Electrical System	28-30
Distribution Panel	29
12 Volt Reset Breakers	29
12-Volt Battery Disconnect Switch	30

Auxiliary Battery	30
Battery Care	30-31
External Power	31
Monitor panel Area	31
Generator	31-32
Motor Home Interior	32-33
Interior Cockpit Map Light	32
Refrigerator	32
Microwave	32
TV/DVD	33
Theatre System User Guide	33-35
RL Bed Assembly	36
TS Bed Assembly	36
Coach Specifications and Features	37

PLEASURE-WAY INDUSTRIES LTD. WARRANTIES & POLICIES

Customer Responsibility:

It is important you read and understand the information in this manual before using your RV.

Familiarize yourself with the applicable warranties. You are responsible for ensuring the procedures for obtaining warranty repair are followed properly. It is your responsibility and obligation to return your RV to your dealership for warranty service repair.

As the owner of the RV, you are responsible for regular and proper maintenance performed in accordance with this manual and the OEM manuals. Regular and proper maintenance will help prevent conditions arising from neglect that are not covered by warranty.

Pleasure-Way Warranty

Pleasure-Way Industries Ltd. warrants the specified new Motorhome free from defects in material and craftsmanship, on the sections manufactured by Pleasure-Way Industries Ltd. under normal use and service. Pleasure-Way Industries Ltd.'s obligation under this warranty shall be limited to 36 months / 36,000 miles / 60,000 kilometers (which ever comes first) after the date of purchase by the ***original retail purchaser*** from an Authorized Pleasure-Way Dealer and shall be limited to making good, at our factory, any part or parts thereof upon return to the factory.

The conditions of this warranty shall not and will not apply to the following:

1. If the Motorhome has been altered outside our factory in any way so as, in our sole opinion, to affect its stability or reliability.
2. If the Motorhome, in our sole opinion, has been subject to misuse, negligence, or accident.
3. Tires, refrigerator, stove, furnace, roof air conditioner, chassis, power train, and any other components, which is under a separate warranty from the manufacturer, and service can be obtained from their facilities in North America.
4. Unauthorized repairs, alterations or modifications;
5. Routine maintenance;
6. Failure of the coach and / or chassis resulting in incidental damages such as loss of use of Motorhome, inconvenience, cost of rental vehicle, and / or cost of accommodations, travel expenses & meals, and other miscellaneous incidental expenses.
7. Damages resulting by: hail, tornadoes, lightning, floods, earthquakes, plow winds, fire, rain & environmental conditions which include tree sap, tar, chemicals, oils, salts, and / or Acts of God.
8. Accident

The conditions of this warranty shall not and will not apply to degeneration due to wear and exposure after these limitations:

1. For one year from the original retail purchase date or 12,000 miles or 20,000 kilometers (which ever comes first), by the original retail purchaser from an Authorized Pleasure-Way Dealer:
 - a) All seat, curtain, door panel and wall fabrics used in the coach;
 - b) Exterior fibreglass surfaces;
 - c) Window seals;
 - d) Exterior power cable hatch, city water fill hatch, porch light, & cable TV outlet;.
 - e) Carpet.
 - f) Black and gray water termination valves;

2. For 90-days from date of the original retail purchase by the original retail purchaser from an Authorized Pleasure-Way Dealer:
 - a) Window screens
 - b) Fresh water tank drain tap; and
 - c) Exterior door catches, cam locks, thumb latches & hinges.

The warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities for alleged representation or negligence. Pleasure-Way Industries Ltd. neither assumes nor authorizes any other person to assume for us any liability in connection with the sale of our Motorhomes other than expressed above.

All correspondence should be directed to the dealer from whom the Motorhome was purchased and must specify the serial number and date of purchase of Motorhome in question.

Pleasure-Way Industries Ltd.'s Warranty Policies

1. Warranty repairs, within the three year or 36,000 miles / 60,000 kilometers (whichever comes first) limited warranty.

2. The Pleasure-Way Customer Care Delivery Form must be on file before any claims will be processed. Claims made without warranty registration cards will be rejected until proof of ownership can be established.

3. Pleasure-Way Industries Ltd. will not reimburse any claims for any work done on any components or appliances that are covered under their respected manufacturers' warranties. These warranties must be claimed through the manufacturer of the appliance or component. Examples: refrigerator, microwave, roof air conditioner, water pump, toilet, stove, TV package components, etc.

4. All warranty work that is required to be performed on the chassis must be taken to an authorized Ford dealership and processed through their warranty procedures. Pleasure-Way Industries Ltd. will not reimburse any claims regarding the chassis. Pleasure-Way Industries Ltd. will pay for the removal and reinstallation of Motorhome components only if absolutely necessary to perform Ford warranty repairs. Pleasure-Way Industries Ltd. will not reimburse any costs in the removal and reinstallation of these components if it is:
 - a) Out of the warranty period
 - b) Non-warranty repairs
 - c) Routine maintenance

SAFETY

For your safety while travelling with your Pleasure-Way Motorhome, we have provided safety components throughout the vehicle. In order for your vehicle to maintain the safest possible conditions, these components must be tested and maintained on a regular basis, according to the detailed manufacturer's operating instructions.

All Pleasure-Way Motorhomes in Canada are CSA and CMVSS Certified, and may exceed the approved installation criteria.

All Pleasure-Way Motorhomes in the United States are FMVSS certified and bear the R.V.I.A. seal of approval, and may exceed the individual state requirements.

Smoke Detector

A smoke detector is provided on the ceiling of your unit near the front. Smoke detectors may give you a warning of fire and smoke, but only if you use and maintain them in accordance to the manufacturer's instructions. **This device should be tested after each time your vehicle has been in storage, before each use, and at least once each week during your vehicle use. Do not block air circulation in the area where the smoke detector is located.** Ensure you connect the battery inside the detector upon receiving of your new unit and that you install a fully charged fresh battery at least once a year.

Fire Extinguisher

A 3-pound capacity fire extinguisher is provided and located at the side door main entrance for ease of accessibility from the interior or exterior. **Warning: This fire extinguisher is a type "BC", which will extinguish flammable liquids and electrical fires, but not wood, paper and cloth fires. You should inspect the extinguisher at least once a month according to the manufacturer's instructions.**

LP Gas Detector

A liquid propane (LP) gas detector is provided near the floor level at the rear of the motorhome interior. This detector will operate to detect liquid propane gasses as well as other gasses that are heavier than air. Your components that require LP gas are provided with complete ventilation to the exterior and are sealed off to the interior for your added safety. This detector is powered by the auxiliary battery and is operating at all times unless the battery is disconnected. **The LP gas detector should be tested every week or every time before a trip, whichever occurs first.** Do not block air circulation in the area where the LP gas detector is located. The test procedure should be performed in accordance to the manufacturer's instructions.

Note: The LP Gas Detector will sound to indicate a low coach battery charge.

Carbon Monoxide Sensor

A carbon monoxide sensor is provided in the monitor panel located above the passenger side door entrance. This detector only indicates the presence of carbon monoxide gas at the sensor. Carbon monoxide gas may be present in other areas. **Warning: Carbon Monoxide Gas cannot be seen or smelled and can kill you. This detector should be tested at least once per week or before every time the coach is taken on a trip.** Do not block air circulation in the area where the carbon monoxide detector is located. The test procedure should be in accordance to the manufacturer's instructions. Carbon monoxide sensors are installed in all Pleasure-Way motorhomes.

Note: The Carbon Monoxide Detector will sound to indicate a low coach battery charge.

GFCI Outlet

A ground fault circuit interrupter (GFCI) 110-volt receptacle located just below the bathroom vanity countertop provides protection against line-to-ground electrical shock hazards that could be harmful or even fatal. The outlets that are on this circuit are the exterior receptacle, the galley receptacle, the two rear receptacles and the fridge receptacle. **These receptacles are to be tested at least once a month in accordance with the manufacturer's instructions.**

Refueling

When you are refueling your gasoline tank or your propane system, ensure that your vehicle is shut off and your main LP valve is shut off. Ensure that your pilot lights have been extinguished as well. **Warning: Even with the main LP valve shut off there is enough gas in the LP lines for the pilot light to continue to burn.**

Filling the LP Gas Fuel Cylinder

When you are filling the LP Gas Fuel Cylinder, the propane tank valve must be closed, all pilot lights, appliances, along with their igniters must be turned off during refueling of motor fuel and / or the propane fuel tank. Only qualified personnel should refuel your propane tank. **Do not refuel the propane tank to more than 80% of its capacity.** To reduce the danger of fire and or explosion, do not store gasoline or other flammable liquids inside your vehicle.

NOTE: Ensure the propane system valve is fully shut when vehicle is in motion. It is not safe to travel while propane appliances are in use.

Seat Belts

Only forward-facing seats equipped with factory installed seatbelts are to be occupied while the vehicle is in motion. All passengers must be seated in these seats only with the seat belts fastened while the vehicle is in motion.

Seat belts are only available in the Ford Excel TS and RD models. Seat belts are not available in the Ford Excel TD model.

Appliances

It is not safe to use cooking appliances to heat the interior of the coach due to the danger of asphyxiation. It is recommended that you read all of the appliance owners / operating manuals prior to using the appliances.

TV Flat Screen

When the vehicle is in motion, it is necessary to have the flat screen television cabinet in the locked travel position to prevent damage to the flat screen and to the TV cabinet. The locking mechanism is located on the left-hand side of the TV cabinet.

Generator

When launching a boat or some form of watercraft with your Pleasure-Way motorhome, it is imperative to not submerge the generator in water. Please refer to the generator owner / operating manual for proper use and maintenance information.

Vehicle Ground Clearance

Your motorhome is equipped with underside holding tanks, waste tanks, plumbing lines, propane lines and other RV related items. Please be careful when driving your motorhome on uneven or poorly maintained roadways.

Emergency Escape

If the need to make an emergency escape from the interior of your motorhome arises, all interior doors are equipped with interior access latches. Your choices of escape routes are as follows, the main entrance at the side door, the driver and passenger side front doors and the rear doors.

Maintenance Schedule

It is recommended that you regularly maintain your Pleasure-Way Motorhome in order to get the maximum benefits from your unit. The life and performance of each component depends upon proper use, operation and maintenance. With a regular maintenance schedule you should be able to catch any components that need attention while you are prepared for them, allowing you to have many years and miles of trouble-free travelling. NOTE: Please refer to your Ford Owners manual for chassis mechanical maintenance.

Helpful Hints

1. To maintain your fibreglass roof and other fibreglass components we suggest that you wax these pieces annually, with an automobile wax, as these are painted components.
2. **When storing your Pleasure-Way Motorhome, you should try to park in a level spot and avoid having to park down hill. If parked in a down hill position with the front end lower than the back end, moisture (rain, snow, etc.) may collect in the recessed portion of the roof. This may cause water to leak through the roof air conditioner. Damage to the motorhome as a result of this is not covered under warranty.**
3. When storing your Pleasure-Way Motorhome, please ensure that all the holding tanks are empty and flushed, all LP gas valves have been turned off, all electrical components are switched off, and the red key kill switch is in the off position.
4. To maintain your monitor probe system it is recommended that after the tanks have been flushed and cleaned, a probe cleaner (which can be purchased from your local RV dealer) should be added to your tanks. Please follow the manufacturer's recommendations.

MOTORHOME EXTERIOR

Motorhome Dimensions and Capacities

Your Motor Home is larger than your standard van or automobile, so please be careful when entering underpasses, garages, parkades, etc.

DIMENSION (approximate)

LENGTH BUMPER TO BUMPER	20' 4"	620 cm
HEIGHT WITH ROOF AIR CONDITIONER	9' 0"	2874 cm
WIDTH WITHOUT SIDE MIRRORS	7' 3"	221 cm
WIDTH WITH MIRRORS	7' 11"	241 cm
BED AREA RD (APPROXIMATE)	L- 81" W- 54"	205 cm 137 cm
BED AREA TS & TD (APPROXIMATE)	L – 74" W – 81"	188 cm 206 cm

CAPACITIES (approximate)

FUEL	35 US gal	132 L
FRESH WATER	24 US gal	91 L
GREY WATER (SINKS AND SHOWER)	26 US gal	97 L
BLACK WATER (TOILET)	12 gal	45 L
PROPANE(LPG)	8.1 gal (At 80 %)	31 L (At 80 %)
WATER HEATER	6 gal	23 L

NOTE: The height of your Motorhome may vary depending upon the tire pressure, air ride pressure and optional components mounted on the roof. The width of the motor home will vary with the positions of the outside mirrors. All measurements and capacities are approximate. There are many variables in the construction of the vehicle for measurements to be absolute.

TIRE/ AIR RIDE PRESSURE:

Tire pressures as recommended by Ford Motor Company. Tire Size LT 245 / 75 R16E

FRONT TIRES: 55 PSI / 380 kPa

REAR TIRES: 80 PSI / 550 kPa

REAR AIR RIDES: 50 PSI this is a recommended setting for general use.

The Air rides are used to assist the springs and shocks of the vehicle. Your inflation rates will vary depending on the loading of the vehicle. It is recommended that you inflate the air rides to a pressure that keeps the vehicle ride level.



Air Ride Fill Valves

(These will only be used if your vehicle is not equipped with the on board air ride compressor and gage). Manual fill valves for the rear air ride suspension are located under the rear bumper of the vehicle. These valves can be filled and tested with a tire gauge and chuck. The rear air bags should maintain 50 psi.



LP Tank remote Fill and Breather

Located in the driver side component compartment in front of the rear wheel well.
NOTE: Only fill your propane tank to 80% capacity.



Driver's Side Furnace Vent

Located on the passenger side above the rear wheel well. This vent is the exhaust and fresh air return for your furnace. NOTE: For maximum efficiency of your furnace this vent should be free from obstruction. Caution this surface may be hot when furnace is running.



Driver's Side Exterior Shower Compartment

Located beside the vehicle fuel fill door on the driver's side, this compartment contains a retractable showerhead with hot and cold-water taps. **NOTE:** When winterizing your Motorhome be sure to winterize this tap and the shower hose.



Driver's Side Water Heater Vent

Located at the rear the driver side, these vent gives you access to the exterior working components of the 6-gallon auto ignite water heater. **NOTE: Keep this vent clear from all obstructions.**



Driver's Side Sewer Hose Compartment

Located on the driver side just behind the rear wheel well. This stores the 10-foot sewer hose.



Driver's Side Sewer Dump Valves

Located in and underneath the driver side component compartment. These dump handles allow you to dump your gray and black waste tanks.

NOTE: Dump your black water first to allow your gray water to flush the black water through the hose.



Driver's Side Fridge Vents

Located on the passenger side just behind the side entry door. These vents allow for airflow for your fridge coils, which help with the cooling process of the fridge.

NOTE: Ensure that these vents are free from all obstructions.



Passenger's Side Fresh Water Holding Tank Fill

Located on the driver side rear beside the water heater access door. This locking door provides access to fill your fresh water tank.



Passenger's Side Exterior 110-Volt Plug

Located on the passenger side rear behind the rear wheel well, this plug will only function if power is supplied through the generator or shore power.



Passenger's Side Exterior Porch Light

Located behind the passenger side kitchen window, this light is controlled by the switch on the kitchen end gable near the entrance handle.



Coach & Chassis Batteries:

The chassis battery is located under the hood of the vehicle, supplied by Ford. The coach or auxiliary battery is an Interstate SRM 24 series deep cycle battery. This battery operates the Motor Home portion of your vehicle. The coach battery is located on the passenger side in front of the rear wheel well. It is installed on a slide out battery tray.



TRAVEL PREPARATION

Before You Leave

Prior heading off on your adventures, you should always check to ensure that:

- the LP gas is off at the main valve
- all black and gray waste water tanks are empty and closed.
- all electrical cords and exterior hoses are stored back into their respective compartments
- chassis fluid levels are at recommended levels
- chassis tire pressure levels are at recommended levels
- chassis exterior lighting is functional
- air ride bag pressures are at recommended levels
- all exterior components are secure and closed
- the refrigerator power switch is changed to 12-Volt

(The 12volt/ DC system is there to maintain the coolness of the refrigerator while in motion. The refrigerator should have been cooled on propane or AC electric before filling it and leaving on you trip.)

- all interior compartments and drawers are closed and locked into position
- all interior components are secure and in place
- the furnace control switch on the thermostat is off
- the TV swing-out is locked into a position
- the site is left in better condition than when you arrived.

While In Motion

It is not recommended that you use any of your appliances while in motion. **Warning: Do not use any LP gas appliances while in motion.** While you are in motion, you will have power to all 12-Volt components such as the dome lights, water pump, roof vent, 12-Volt receptacle, TV, and DVD. You will not have power to the microwave, 110-Volt receptacles, coffee maker and roof air conditioner.

Upon Arrival at Your Site

Once you arrive at a site, please ensure that:

- your motorhome is parked in a level position so that your components will be at their optimum performance (place a bubble level in the freezer shelf of the refrigerator to use as a base and level your unit according to this)
- all exterior vents are clear from obstructions
- the black and gray water waste tank valves are closed
- hook up your 110-Volt power cord to your coach and then to the site receptacle (if supplied at site)
- hook up your fresh water line to the city water pressure connection (if supplied at site)
- it is recommended for pressurized city water that a water regulator is used
- turn the LP gas on
- turn the refrigerator switch power to LP gas selection or 110-Volt power (AC).
- turn the water heater on (Before turning it on, make sure the water heater is filled with water)
- connect park cable and telephone jack (if supplied)

MOTORHOME SYSTEMS

LP Gas System

Your motorhome is equipped with a Liquid Propane (LP) gas system that provides fuel to the appliances (refrigerator, cook top, water heater and furnace).

The LP storage tank is located on the driver side behind the component compartment-swinging door. The filler and bleeder valve, the LP tank gauge and the LP gas regulator are also in this location.

Propane fuel is stored in a liquid state under extreme high pressure. As fuel is used, propane vapor passes from the tank through the regulator into the gas lines and eventually to the appliances. Although the propane system has undergone extensive testing for leaks, the system's connections and fittings are subject to road vibrations and should be checked regularly for possible leaks.

Propane fuel is extremely flammable, colorless, heavier than air and smells like rotten eggs.

The main shut-off valve to supply propane to the coach is operated by the round handle located in the driver side component compartment (ensure this switch is on before operating appliances.)

LP gas regulators must always be installed with the diaphragm vent facing downward. Regulators that are not in compartments have been equipped with a protective cover. Make sure that the regulator vent faces downward and that the cover is kept in place to minimize vent blockage that could result in excessive gas pressure causing fire or explosion.

Warning: Do not bring or store LP gas containers, gasoline or other flammable liquids inside the vehicle because a fire or explosion may result. LP gas containers should not be placed or stored inside the vehicle as LP gas containers are equipped with safety devices that relieve excessive pressure by discharging gas into the atmosphere.

Warning: It is not safe to use cooking appliances for comfort heating. Cooking appliances need fresh air for safe operation. Unlike homes, the amount of oxygen supply in the unit is limited due to the size of the vehicle. **Proper ventilation when using the cooking appliance(s) will avoid dangers of asphyxiation.**

Warning: Do not use portable fuel burning equipment, including wood and charcoal grills and stoves inside the motorhome. The use of this equipment inside the recreational vehicle may cause fire or asphyxiation.

DO NOT FILL LP CONTAINER TO MORE THAN 80% CAPACITY. Overfilling the LP gas container can result in uncontrolled gas flow, which can cause fire or explosion. A properly filled container will contain approximately 80% of its volume of LP gas.

If you smell gas:

1. Extinguish any open flames, pilot lights and all smoking materials.
2. Do not touch any electrical switches.
3. Shut off the gas supply at the tank valve or gas supply connection.
4. Open all the doors and other ventilating openings.
5. Leave the area until the odour clears and you are sure there is no further risk to you.
6. Have the gas system checked and leakage source corrected before using again.

LP Off/On Valve:

Located in the driver side component compartment. This valve, when open, allows LP to flow to the coach.



LP Fill Valve

Located in the driver side component compartment. This valve, covered by the yellow end cap allows you to fill the LP tank to 80% capacity.



LP Bleeder Valve

The bleeder valve allows pressure to vacate the LP tank when 80% full.



LP Tank Gauge

This gauge indicates how full the LP tank is.



How to Use the LP Appliances:

Turn your red key disconnect switch to the on position (located behind the small door under the furnace vent). Turn your LP on / off valve to the on position as mentioned above (located in the driver side component compartment).

Cook Top:

The vehicle is equipped with a two-burner flush mount cook top located in the kitchen counter top.

- 1) Lift the glass cover.
- 2) Turn the selected burner knob to the ignite (flame) position. This allows propane to flow to the selected burner.
- 3) Depress the middle ignition spark knob until the burner ignites.
- 4) Turn the burner knob to adjust the flame to the appropriate heat setting.
- 5) When you have finished using the cook top, turn the burner knob to the off position allow the burner to cool before closing the cook top cover.

Please consult the Smeve stovetop owner's manual for complete operating and cleaning instructions.



It is recommended that the Fantastic Fan be used for ventilation when this appliance is in use.

Furnace:

Your vehicle is equipped with a 16,000 BTU Suburban LP gas Auto Ignition Furnace. The furnace is located on the bottom right hand side of the galley. The thermostat control is located above the stovetop and to the right on the wallboard.

- 1) Ensure that there is propane supplied to the coach.
- 2) Ensure there is 12V power to the coach.
- 3) Slide the top heat selector tab to the right on the thermostat to your desired temperature.
- 4) The Furnace will auto ignite and cycle through fan and heating. The furnace will cycle keeping the desired temperature.



Refrigerator:

Your vehicle is equipped with a Dometic three way fridge (LP gas, AC & DC).

- 1) To turn the fridge on, turn the on / off button to the on position. Select your power source (LP gas, AC or DC). Then select your desired level of coolness (this may vary slightly with each fridge and weather condition).



- 2) The DC or Auxiliary Battery symbol is used when the vehicle is in motion. The DC mode will maintain your fridge while driving, but should not be used for dry camping or initial cooling of the refrigerator.
- 3) The AC symbol is recommended when the vehicle is operating off of a 120-volt power source (shore power or generator).

Note: For the best cooling results your vehicle should be level and the exterior refrigerator vents free from obstructions. Please consult your Dometic fridge-operating manual for complete operating and maintenance instructions.

Water Heater:

Your vehicle is equipped with a 6 gallon LP Suburban gas Auto Ignition Water Heater. The water heater is located underneath the rear electric sofa bed on the driver side. You can access the by-pass valves through the rear doors and reaching under the electric sofa bed.

- 1) For normal or summer operation, ensure your by-pass valves are in summer position. The valves at the top (red line) and bottom (blue line) of the water heater should be open. The valve between the top and bottom valve should be closed. The valves are open if the handle lines up with the water line, and are closed when making a T with the water line.

SUMMER POSITION



WINTER POSITION



- 2) Ensure the water heater is full of water. To check this open the water heater vent on the exterior of the coach and lift the pressure relief valve, water should flow out of the spigot.
- 3) Fill your water heater by running your water pump or hooking a pressurized source onto the city water hook up. Open a hot water tap in the vehicle to allow the air from the hot water tank to escape while the tank fills with water (this can also be done by opening the pressure release valve on the water heater until water flows out of the spigot).
- 4) Once the water heater is full turn on the water heater switch located above the side entrance door in the monitor panel. Ensure the liquid propane supply to the coach is also turned on.

Note: Your LP gas appliances may not light on the first try. There may be air in the LP gas lines that will dissipate as the gas pressurizes the lines.

Fresh Water System

The water system built into your motorhome provides full service similar to the system in your home. A 12-Volt self-priming pump draws pressurized water from the fresh water tank to all cold faucets and the water heater. An automatic pressure switch located in the water pump maintains a positive line pressure between 20 to 30 p.s.i. The fresh and gray water tanks are located underneath the floor. The black water tank is located above the floor under the toilet and shower pan.

Filling the Fresh Water Tank

- 1) Unlock the Fresh Water Fill. Remove the large white cap.
- 2) Insert a garden hose into the fill opening.
- 3) Turn the water source on to a medium flow rate, as a high-pressure flow will cause water to gush out of the fill opening.
- 4) Monitor the fresh water fill level using the FRESH button on the monitor panel located above the passenger side entry door. Do not over fill this tank. You may see water coming out through the fill tube or air vent screen as this also indicates the fresh water tank is full.

- 5) If you have over filled your fresh water tank or you want to drain some of the water out of the fresh water tank, open the drain spigot located on the fresh water tank. This fresh water tank is located behind the rear axle. The fresh water tank spigot is located on the driver side underneath the coach just behind the rear axle.



NOTE: If you notice water running out from underneath the van when filling the tank, there is a drain spigot on the fresh water tank, turn it to the closed position.

City Water Connection

The city water connection is located in the driver's side component compartment. The city water connection is a convenience for you when you have access to an outside water source. When hooking up the city water connection you should make sure that the water pump switch is turned off and that all water faucets are closed.

- 1) Open the driver side component compartment.
- 2) Remove the plastic insert from the city water connection.
- 3) Attach a garden hose to the connection using a rubber washer to ensure the fitting is tight.
- 4) Turn the water source on to a medium pressure.
- 5) Check for leaks at the city water connection, as you may have to re-tighten this connection.



NOTE: In different areas the water pressure may vary. It is advisable to use a water pressure regulator because excessive pressure may result in water-line damage. The city water system bypasses the fresh water holding tank and feeds the water lines directly so that you will not have to use the water pump. To disconnect the city water system, first turn off the water source, then open a faucet to relieve some of the pressure in the lines (if you do not open a faucet to relieve some of the pressure, when you unhook the water line, water may spray out), then unhook the water line.

Water Pump

The 12-volt Sure Flo water pump is located in the cabinet on the left-hand side of the fridge. The filter and the inlet connection are visible on the top of the water pump.

Activate the water pump using the Pump switch at the bottom of the monitor panel located above the passenger side entrance door. **Please consult your Sure Flo operating manual for complete operating and maintenance instructions.**



Trouble Shooting:

If the pump will not prime, please check:

- to make sure there is water in the holding tank
- to make sure that the battery is not run down
- for kinks in the inlet water line
- for leaks at inlet fittings (if air is leaking into inlet fittings, tighten fittings or apply clamps as necessary)
- for clogged lines
- the inline flow filter, located beside your water pump.

If the water pressure drops:

- make sure faucet aerators are clean
- check to make sure there is water in the holding tank
- check to make sure the battery is not run down
- check faucets and connections for leaks.

If the pump runs when there is no apparent demand for water:

- make sure there is water in the holding tank
- check all faucets and fixtures to make sure they are all shut off and not leaking
- check line for leaks.

Toilet

Please refer to the manufacturer's operating instructions.

Toilet Trouble Shooting:

1. Water keeps running in the bowl:

- check to see if all the levers are turned all the way back. Sticking may be caused by foreign material on the waste valve blade seal at the bottom of the bowl. If the problem persists, you may need to replace the water valve.

2. The Toilet leaks, there is water on the floor:

- if the leak is in the back of the toilet, check the water supply line connection and refer to the manufacturer's installation instructions. If the leak is at the toilet flange area (where the toilet mounts to the floor), check the toilet flange nuts to tighten.

3. Poor flush pressure:

- the levers must be held fully open during the flush. A good flush should be obtained within 2 to 3 seconds. If the problem persists, remove the water supply line and check the water supply. The water supply rate should be at least 10 litres/2.5 gallons per minute to ensure an adequate flush.

Shower

To protect the surface of your ABS plastic shower pan, it is recommended that a rubber shower mat be placed in the shower pan. Use a non-abrasive cleaner to clean your shower compartment. NOTE: Do not use highly concentrated or high acid content household cleaners, as these may damage the shower compartment.

- 1) Remove the shower pan floor carpet.
- 2) Velcro the side window removable shower curtain into place.
- 3) Slide the shower curtain across the door opening.
- 4) Adjust the water temperature to the desired level.
- 5) Lift the center flow lever between the taps.

It is recommended that the fantastic fan is running while the shower is in use to remove humidity. It is recommended that the bathroom be wiped down after the shower has been used. This will help prevent mildew and other residues from forming on shower walls.

Waste System

The Ford Excel is equipped with two waste tanks.

- 1) Black water tank located above the floor of the van directly under the toilet. Only the toilet water and solid waste enter this tank. This tank is approximately 12 US gallons or 45 liters.
- 2) Grey water tank located under the passenger side of the vehicle. This tank handles wastewater from the sinks and the shower. This tank is approximately 26 US gallons or 97 liters.

Before using your waste holding tank, deodorize it by adding one gallon of water and commercial tank deodorizer through the toilet.

Draining Waste Holding Tanks

- 1) Open the driver side component compartment door located on the driver side. This will expose the sewer dump outlet. Press in the black and gray dump valve handles to ensure the valves are closed. Remove the black termination cap.



- 2) Access the sewer hose from the locking sewer hose compartment located on the driver side behind the rear wheel well. Connect the sewer hose to the drain outlet, and put the opposite end into an appropriate sewer dump outlet



- 3) Open the termination valve on the solid waste holding tank (black handle). Once this tank is empty, then open the valve for the gray waste tank (grey handle). A garden hose may be left running into the toilet with the valve open to further rinse the tank and sewer hose.
- 4) Close the termination valves and replace the cap and store your sewer hose back in the canister.

Deodorize the empty tank by adding one gallon of water and commercial holding tank deodorizer through the tank.

NOTE: If the black water holding tank is allowed to overflow, the overflow may back up through the toilet drain.

NOTE: If the gray water tank is allowed to overflow, the overflow may back up through the shower drain.

If you are using a sewer hook up in a RV park, keep the valve closed until the holding tank is at least partially full, then drain. The large quantity of waste flow will provide more effective drainage and reduce tank stoppages.

NOTE: It is important to clean your monitor probes in your holding tank to ensure their reliability. See your RV dealer for suggested cleaning solutions.

Winterizing

- 1) Drain your fresh water tank. The fresh water tank is located behind the rear axle (see page 22 for approximate location). Open the drain spigot by turning the top lever and let the water drain (there may be a small amount of water left in the tank after it is drained.).
- 2) Drain your hot water tank. First, relieve pressure inside the hot water tank with the pressure relief valve located at the top of the hot water tank. Then remove the anode rod at the bottom of the water heater tank on the outside of the vehicle. The anode rod is a 1 1/16" nut. Loosely reinstall the anode rod after the water heater is drained, this will prevent dust and insects from entering the heater while in storage.



- 3) Turn the water heater bypass valves to the winter position. The water heater bypass valves are located underneath the rear electric sofa bed on the driver side. You can access the by-pass valves through the rear doors and reaching under the electric sofa bed.
- 4) The winter position means that the valve handle at the top of water heater on the red line should be closed and the valve at the bottom of the water heater on the blue line should be closed. The valve in between where the red and blue lines connect should be open (the valves are closed when the handle of the valve makes a T with the water line).

SUMMER



WINTER




- 5) Remove the water line from the inlet side of the water pump (this is the clear plastic line going into the water pump filter.) Connect a siphon hose to the inlet side of the water pump place the other end in a container RV non-toxic antifreeze. Turn on you're the pump. This will pump non-toxic RV antifreeze through all of your fresh water lines.



NOTE: Siphon hose consists of 40" of ½" clear tubing with a fitting to attach to the water pump. The fitting can be purchased through an RV dealer.

- 6) Open the kitchen and bathroom faucets one at a time allowing the antifreeze to flow through both the hot and the cold sides. Be sure to also open the toilet valve and exterior shower faucet. Turn off the water pump and disconnect the siphon hose, reattach the original fresh water supply fitting.
- 7) Pour ½ cup of RV antifreeze down each drain (kitchen sink, bathroom sink and shower drain).
- 8) Fully charge your auxiliary coach battery and turn off and remove the red key disconnect. The red key disconnect is located behind the door beneath the furnace.

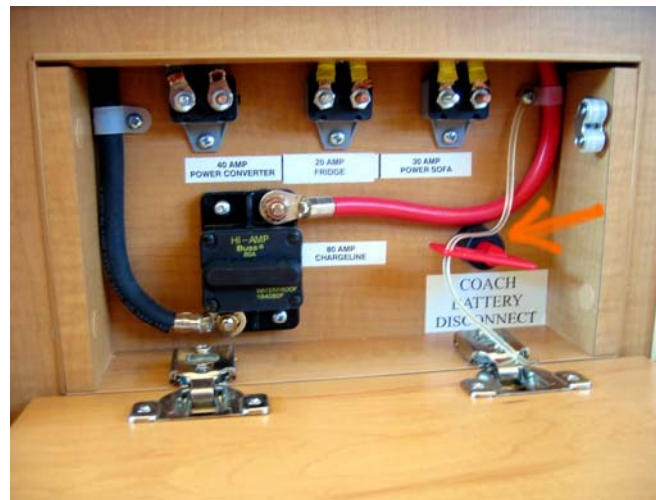

- 9) Turn you thermostat to the off position.

10) Turn your propane tank off.

11) Place your fridge door in a slightly open position for air to circulate through the fridge..

It is recommended that you start and run your vehicle and generator once a month during the winter season.

Winter Use

We recommend that the water system not be used when the outside temperature drops below the freezing point. You should ensure that your unit is completely winterized by that time. If it is necessary to use the water system, we suggest that you bring containers of fresh water with you and add non-toxic RV antifreeze to the gray and black water holding tanks. NOTE: Keep in mind that as you add more water to the holding tanks the antifreeze will dilute more than the recommended amount and may start to freeze earlier at cold temperatures. Do not use the exterior shower.

Living Area Electrical System

The Motorhome living area electrical system is designed for convenience. It is capable of supplying the vehicle with at least two sources of power. A 12-Volt auxiliary battery supplies power to the interior components (except AC current plug receptacles, roof air conditioner, microwave, coffee maker and fridge on AC) for short-term use. The auxiliary coach battery is charged when the chassis engine is running or when you are plugged into a 110 volt power source with the disconnect switch in the on position.

For long term use, your vehicle may be powered by plugging into a 110-Volt external power source with the supplied 25-foot power cable. The yellow 25-foot power cable supplied with your coach must be connected to your coach and then to a 110 volt power source (30 amp outlet is recommended). This will supply 110-Volt power throughout the interior and supply power through a power converter to all 12-Volt components.

NOTE: Connect the power cord to your coach first and then the external power source.

Your unit is equipped with a 110/12-Volt power converter. Its function is to take part of the 110-Volt current that is received when the unit is plugged into an external power source and convert it to 12-Volts (which powers most of the motorhome components). It also provides 110-Volt power to the components that only require 110-Volts.

NOTE: The 12-Volt or DC power on your fridge should only be used while in motion or running the vehicle engine.

12 volt or DC Equipment	110 volt Or AC Equipment
TV when plugged into the Inverter	TV when plugged into the AC receptacle
Refrigerator when on DC or LP gas	Refrigerator on AC
Interior & Exterior Coach Lights	Microwave
DVD Player, Antenna Booster and Amplifier	Air Conditioner
Water Pump	110 volt Plugs
Water Heater	Coffee Maker (if equipped)
LP gas & CO Alarms	
Generator Start Switch	
Furnace	
Power Sofa (if equipped)	
Air Ride Compressor (if equipped)	

Electrical Distribution Panel

The Ford Excel is equipped with an Iota distribution panel that houses the breakers for the 110-volt system and the blade fuses for the 12-volt system. The distribution panel is located on the passenger bench face in the TD model and on the sofa bench face in the TS and RD model.

Remove the large vertical smoked plastic cover panel to access the 110-volt breakers or the small horizontal cover panel for the 12 volt fuses.



12-Volt Manual Reset Breakers and Converter Output Fuses

Your motorhome has manual re-settable breakers. If you have the optional electric rear sofa, you will have three manual resetting breakers. These manual re-setting breakers are labeled. Access to these breakers is through a compartment door found on the passenger side underneath the furnace. These breakers have a 40, 30 and 20-amp capacity. The 40-amp breaker controls the power converter, the 30-amp breaker controls the power sofa and the 20-amp breaker controls the refrigerator when it's running on 12-Volts. There is also an 80-amp charge-line breaker.

If you are experiencing any difficulties with your power converter, refrigerator, electric sofa or charging system while on 12-Volt, check these breakers first to determine if they are tripped. There is a small re-set button located on the end of the breaker. Simply push it in if it is tripped.



12-Volt Battery Disconnect Switch

There is 12-Volt disconnect switch (red key) located on the passenger side through a compartment door found beneath the furnace (same compartment as the manual reset breakers). When the key is in the “ON” position it will be locked in place. When the key is in the “OFF” position it can be easily removed, which will stop all 12-Volt power supplied to your coach. **Note: The disconnect switch will have to be in the on position to charge your battery from the converter in this vehicle. If your vehicle is going to be parked for longer than a 48 hr period, turn this switch to the off position as the CO detector and the LP detector are hard wired to the coach battery and will eventually drain the battery.**



Auxiliary Battery

The auxiliary battery (coach battery) is located on the passenger side in a battery pull out tray. It is an Interstate SRM 24 Marine / RV deep cycle battery. This battery operates the Motor Home portion of your vehicle only.



The chassis battery and auxiliary battery are two separate systems. Both batteries are charged from the alternator, but only the auxiliary battery is charged from the converter. The Chassis battery powers all chassis related items such as the map light between the driver and passenger seat, all dash features, driving lights, power mirrors, locks and windows. The auxiliary battery powers all living area lighting, DC appliances and air ride compressor.

The Ford chassis battery is located under the front engine hood. Consult your Ford owners manual for details.

Battery Care

Your auxiliary battery must be regularly cleaned and maintained at least once a month in order to provide a reliable and constant power source to your Motorhome. To ensure satisfactory battery performance, battery terminal cleanliness is essential. NOTE: Please consult your DODGE manufacturer’s instructions for detailed maintenance recommendations.

Warning: Batteries give off explosive gases that can cause severe personal injury. Do not smoke in or around the battery and keep open flames and other sources of ignition well away from the battery. Remember that batteries can and do, EXPLODE! Be very careful. Battery electrolytes can cause severe eye damage and skin burns. Always wear protective equipment (goggles, rubber gloves, a protective apron, etc.) when working with batteries.

External Power

A 25- foot, 30-amp power cord is provided with your Pleasure-Way motorhome. In order to activate all power circuits, connect the yellow power cord to your coach in the driver's side component compartment and to an adequate 110-Volt power source. The connector is rated for 30-amp capacity. NOTE: The male end of the power cord is a 30-amp plug, therefore you may require an adapter to convert the plug into the 110-Volt style. Most RV parks are equipped with 30-amp plug-ins. Remember to always attach the power cord to your coach first, and then to the power source.

Monitor Panel Area

There is a monitor panel located above the passenger side entry door. Located in this panel is the carbon monoxide sensor, water heater control switch, generator control switch (optional) and the water pump control switch, which also monitors the black water, gray water, fresh water and coach battery charge level.



Generator

If your unit is equipped with a generator, it will be located directly behind the driver door. Access to the generator is through the locking compartment door. There is no access to the generator through the interior of the coach. This prevents exhaust gases from seeping into the living compartment. The generator will provide an added source of power to run the electrical system when you are not plugged into a 110-Volt power source.

Starting the Generator:

- 1) Turn on the red key disconnect switch.
- 2) Ensure there is at least a ¼ tank of gas as the generator runs off the van chassis fuel tank. If there is less than a ¼ tank of fuel, the generator will not start.
- 3) Press the generator start switch in the monitor panel area.

NOTE: It may take a few seconds initially for the generator to start. Your generator draws its gas supply from the van chassis fuel tank. Once the generator is running, it supplies power to the entire electrical system, just as if your unit was plugged into a 110-Volt power source. You will have to balance your electrical consumption as you have a limited number of watts/ amps available.

Please refer to the generator's manufacturer's operating manual for complete operating instructions and maintenance procedures.

NOTE: If your unit is equipped with a generator, it is essential that you run your generator at least ½ hour a month under load (microwave, AC, coffee maker, etc.) to keep the generator fuel from damaging the carburetor.

NOTE: For your safety and protection, all generator or generator-ready units are equipped with an automatic transfer switch that will allow your coach to receive power from either shore power or your generator.

MOTORHOME INTERIOR

Interior Cockpit Map Light

Please follow the vehicle manufactures instructions for operating procedures.

Refrigerator - Dometic

Your Dometic refrigerator is designed for 3-way operation, using 12-Volt DC, 110-Volt AC and LP gas power. When the refrigerator is switched to AC or DC, the ammonia/water mixture is heated by a heating element instead of a burner.

When your motorhome is stationary, it should be leveled for your refrigerator to provide the proper cooling. A bubble level should be placed on the freezer shelf to check the refrigerator for levelness. If the refrigerator is not level you may have improper cooling.

NOTE: Please refer to the Dometic operating manual for complete operating instructions and maintenance procedures.

NOTE: The DC or 12-Volt setting is for transportation purposes only. It is recommended that if you are going to be stopped for more than a short period of time, you should switch your refrigerator to propane or an AC setting and plug into a 110-Volt supply. The refrigerator should be turned to 12-Volt when the vehicle will be in motion and the LP gas must be turned off.

Microwave- Dometic

Your Dometic microwave operates of 110-volt AC power only. To use your microwave you must be plugged into shore power or have the generator running (the microwave cannot be used at the same time as the roof AC unit when operating on the generator).

NOTE: Please refer to the manufactures operating instructions for maintenance, operation and cooking.

TV and DVD (Optional)

If your motor home is equipped with TV and DVD components, you will find these located in the rear entertainment center. These two components are powered by a 12-Volt power source. The TV flat screen is powered by a 12-volt inverter located behind the flat screen.

NOTE: Your DVD is a player only as it will not record. To play a CD or MP3 the TV flat screen must be in the on position.

NOTE: Ensure the TV travel lock is locked into the travel position when the vehicle is in motion. The travel lock is located on the bottom left hand corner of the TV cabinet.



19" THEATRE SYSTEM

Basic Operating Manual

A) COMPONENTS:

- 1) 19" Flat Screen Monitor with swing out cabinet
- 2) DVD/CD/MP3 player
- 3) 400 watt Inverter
- 4) Amplifier
- 5) Noise reduction ground loop
- 6) Auxiliary power switch
- 7) Satellite speakers
- 8) Antenna booster
- 9) Optional AC power source

B) BASIC OPERATION:

- 1) Turn the auxiliary power switch to the on position. This is the switch to the left of the dvd player.

Note: you will hear a fan noise run when you are powering your TV through the inverter. (If you are powering your TV through the inverter and the fan does not come on check the power switch at the bottom of the inverter.)

- 2) Turn on the TV using the small button on the bottom right hand side of the TV.
- 3) Using the source button, select AV for the DVD player or Antenna if you want local air or cable channels.

- 4) For Cable simply turn off the antenna booster (located behind the flat screen) leaving the source on antenna.

Note: for local air channels ensure your antenna is cranked up and the antenna booster switch is in the on position. The antenna booster switch is located You may have to rotate your antenna for better reception.

- 5) Receiving channels above 13 :

- a) Push the menu button.
- b) Using the channel down button move to the satellite symbol.
- c) Push the enter button. (second button from the right at the bottom of the TV) AIR /CABLE will be in yellow hi-lights.
- d) Push the enter button and just AIR will be in yellow hi lights. Using the channel down button move the yellow hi lights to STD.
- e) Push the enter key
- f) Push the menu button three times to return to regular TV screen

- 6) To AUTO PROGRAM your TV for air or cable channels:

- a) Push the menu button.
- b) Using the channel down button move to the satellite symbol.
- c) Push the enter button. AIR/CABLE will be in yellow hi lights.
- d) Using the channel down button move the yellow hi lights to AUTO PROGRAM.
- e) Push the enter button.
- f) The AUTO PROGRAM key will appear with START in yellow hi lights.
- g) Push the enter button. Auto programming will begin with STOP in yellow hi lights. If you wish to stop the auto programming hit the enter button and start will appear.
- h)** Push the menu button to return to the regular TV screen.

C) **POWER SOURCE :**

There are two options for AC power on your TV system.

For operation the power button to the left of the DVD player must be in the on position.



- 1) When the motor home is not plugged in to an outside power source or not operating off your generator, the power source is through your DC battery and the inverter. The inverter is located behind the TV flat screen. The inverter has a power switch located on the unit. A fan will run when the inverter is on.



- 1) When the motor home is plugged in or operating off of the generator there is an AC power outlet located behind the TV flat screen. Unplug the AC power cord from the inverter and plug it into the AC outlet. Turn off the inverter to eliminate the inverter fan noise.



- A) 400 watt inverter
- B) Amplifier
- C) Noise reduction ground loop
- D) Antenna booster
- E) AC Power Source




- Antenna Booster
- A) Green indicator light
 - B) Booster Off/On switch.
 - C) 12 volt power source 3 amp

TD Full Size Bed Assembly

To make up the Full-size bed in the TD model, lift the center removable night table and place it on the floor.



Lift the passenger side single bed and remove the cushion support boards. Place the cushion support boards on the support rails between the passenger and driver side bench faces.

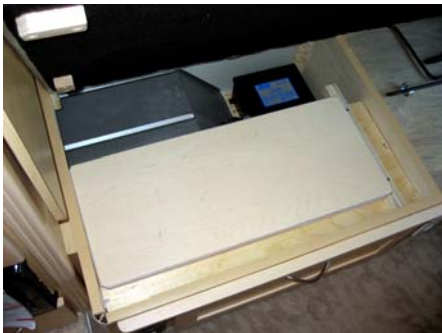

Finally, place the side backrest cushions in between the passenger and driver side single beds.



TS Bed Assembly

Using the sofa bed switch beside the DVD player lay the sofa bed down to a flat position. You can sleep with the sofa bed in this configuration (U shape) as two single beds with the space between the two ottomans open.



You can also use the cushion support board (located in the closet) to make a full king-size bed. Place the cushion support board on the support rails between the two ottoman benches. Place the ottoman cushions on the inward side of the ottoman rails. This will ensure the ottoman backrest cushions fit tight between the ottoman cushions. Place the ottoman backrest cushions on the bed board between the ottoman seat cushions.



Ford Excel :

	TD	TS	RD
Dometic 3-way Refrigerator	X	X	X
Dometic .7 cu.ft. Microwave	X	X	X
2 Burner Flush Mount Cook Top with Glass Cover	X	X	X
Suburban 16,000 BTU Auto Ignition Furnace	X	X	X
Suburban 6 gal Auto Ignition Water Heater	X	X	X
Sure-Flo Demand Water System	X	X	X
Thetford Flush Toilet	X	X	X
Self Contained Bathroom with Shower & Sink	X	X	X
C.O. Detector	X	X	X
LP Gas detector	X	X	X
Smoke Detector	X	X	X
Fire Extinguisher	X	X	X
Fantastic Fan Roof Vent	X	X	X
Coach Battery	X	X	X
Battery Disconnect Switch	X	X	X
45 amp Power Converter with Distribution Panel	X	X	X

Monitor Panel System (Black, Gray, Fresh water, Battery)	X	X	X
Fresh Water Fill	X	X	X
Fresh Water Tank (91 L or 24 U.S. Gal)	X	X	X
Grey Water Tank (97 L or 26 U.S. Gal)	X	X	X
Black Water Tank (45 L or 12 U.S. Gal)	X	X	X
Generator Ready (switch, wire for connections & mount brackets)	X	X	X
Exterior Shower	X	X	X
*Rear Bed Area (74" X 81")	X	X	
*Power Sofa		X	X
*Rear Bed Area (54" X 81")			X
Awning Style Windows	X	X	X
Large Round Table	X	X	X
Porch Light	X	X	X
Cable TV Hook Up	X	X	X
TV Antenna	X	X	X
Water Heater By-Pass	X	X	X
Fiberglass Running Boards	X	X	X
Counter Top Flip Up	X	X	X
Exterior Plug	X	X	X

NOTE: Pleasure-Way Ind. Ltd. reserves the right to make product changes at any time with out prior notice or obligation.

- The bed area measurements may vary, due to components inside the vehicle.